


# Use, Care and Maintenance of Your New Vytex Windows

## Sliders

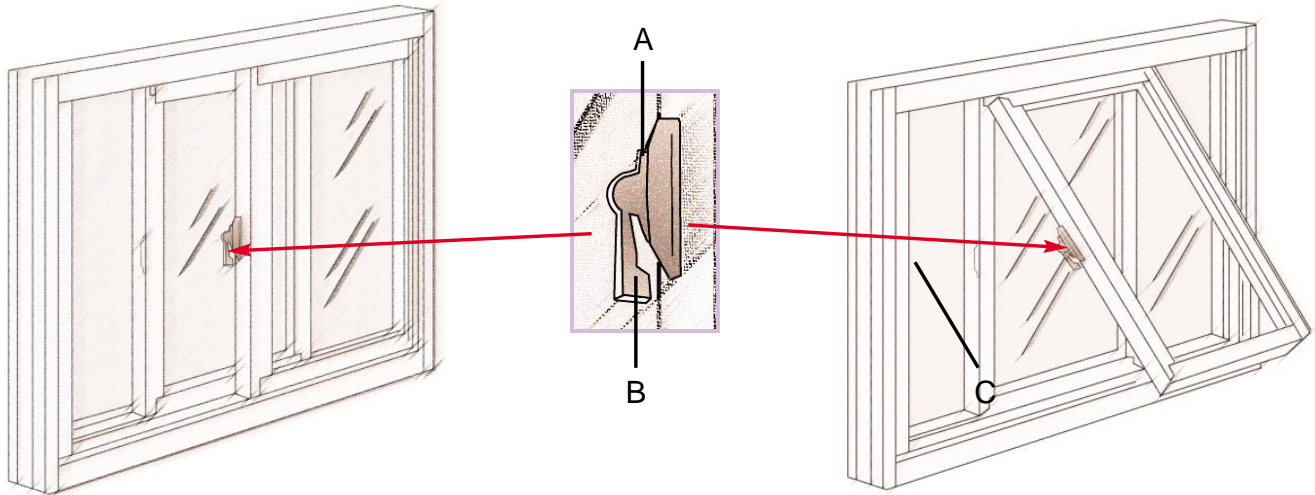

### **HOW TO OPERATE YOUR SLIDER:**

To open, simply disengage the lock (A) by pushing on the thumb lever (B). When disengaged, both sashes (C) will be free to slide left or right.

### **HOW TO CLEAN YOUR SLIDER:**

- A. To remove sashes for cleaning disengage lock (A) and slide sashes to the center of the window.
- B. With two hands, lift the inside sash up into the frame and pull out at the bottom. The sash can now be removed from the frame completely for cleaning. The same process is repeated for the outside sash.

**NOTE: The sliding window sashes are removable: They do not pivot in any way.**

When cleaning is complete, replace sashes, beginning with the outside sash, by inserting the TOP of the sash into the top of the frame as far as possible. This will allow for enough clearance to insert the bottom of the sash into the frame. When in position, push the sash down into the lower frame to complete the process.

**NOTE: Check position of weather strips and locks to assure proper performance and operation of window. never use excessive force when operating any part of the window.**

## Maintenance

### **(For All Window Styles-All Vytex Windows are Virtually Maintenance Free)**

- A. Glass can be cleaned with household glass cleaners in the normal fashion. Vinyl components can be easily cleaned with a non-abrasive household cleaner or soap and water.
- B. Painting is not required. The color of the Vytex window is solid through all window components.
- C. Lubrication is not required. All moving parts are self-lubricating. Rollers are made of metal for long lasting, trouble-free performance.